

Thermal Receipt Printer



Warning :

No part of this manual can be changed without agreement. The company reverses the rights to modify the technology, components, software and hardware. You may ask the distributors for more product information. No part of chapter in this manual can be copied or transmitted in any format without permission.

CP.Q2

YOUR STYLE PRINTER
FEATURES A MODERN DESIGN

80mm


User Manual



Please keep user manual for reference

1. What is in the box:


- | | |
|---|----|
| (1). 80mm Thermal Receipt Printer | ×1 |
| (2). AC adapter (with one AC cable power cord) | ×1 |
| (3). Data Cable except for Ethernet port | ×1 |
| (4). User's Manual | ×1 |
| (5). 80mm roll Paper | ×1 |
| (6). Software Disc(optional) | ×1 |

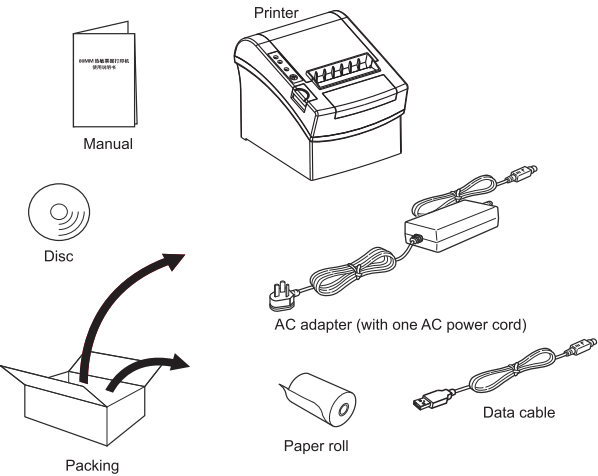

2. Paper roll installation

Follow the steps below to install the roll paper:


- (1). Open the roll paper cover.
- (2). Insert the roll paper as the following illustration shows.
- (3). Pull out a small roll of paper, and close the roll paper cover.
- (4). Tear up the spare roll paper.

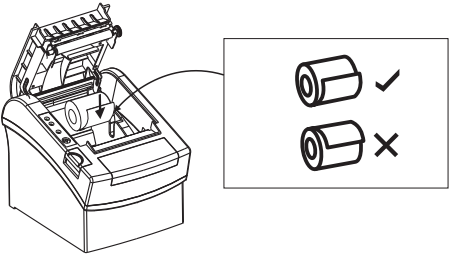

3. Function overview

【1】 Part names and function

- (1) **FEED button**
Press this button to feed paper. Keep pressing down to feed paper continuously.
- (2) **Status LED**

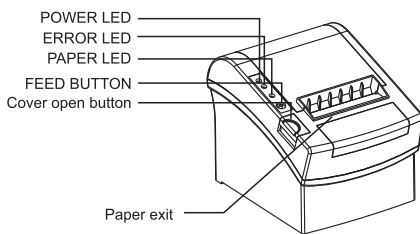

Status	Flash Mode	LED
Closed roll paper cover with paper	Error Paper	No lights
Closed roll paper cover without paper	Error Paper	Paper LED flashing at $t = t_1 + t_2$
Opened roll paper cover without paper	Error Paper	Error LED and Paper LED on
Opened roll paper cover with paper	Error Paper	Paper LED on and Error LED flashing at $t = t_1 + t_2$
Cutter fails to operate	Error Paper	Error LED flashing at a faster speed
Thermal head overtemperature	Error Paper	Error LED flashing at a faster speed

(3) POWER LED

Power LED on represents printer power on; Power LED off represents printer power off.

[2] Self test instructions

Make sure the printer is connected with the power and turn it off. Keep Pressing down the FEED button and simultaneously turn on the power. Release FEED button when the ERROR and PAPER LED double-blinking in the same time. The printer will automatically print out self-test paper including its status and configurations.

[3] How to enter hexadecimal mode

Make sure the printer is connected with the power. Press the FEED button and simultaneously turn on the power. Then wait for the ERROR and PAPER LED double-flashing at the same time, wait for the ERROR LED on and stop pressing

3

Cautions:

- (1) Be sure to install your printer on a stable surface and prevent it from vibration and impact.
- (2) Do not use and store in locations subject to high temperature, humidity or pollution levels.
- (3) Connect the power adapter into a properly grounded outlet. Do not share the same plug socket with large-scale electrical motor or other motors which may cause the power supply voltage fluctuations.
- (4) Avoid water or other conductive materials like metal get into the intern of printer. If it happens, unplug the AC power cord immediately.
- (5) Do not print without paper, or it will damage the rubber roller and thermal printhead.
- (6) Unplug your printer before leaving it unused for an extended period.
- (7) Never dissemble or modify the printer for repair or reconstruction.
- (8) Be sure to use the original specified power source.
- (9) Quality roll paper is recommended for premium printing and product maintenance.
- (10) Be sure to turn the product off when plugging and unplugging.
- (11) Place the plug socket around the product for convenience.
- (12) This product is used only below 5000 meters above sea level in tropical climate conditions

Clearance

Timely clean the printhead if one of the below conditions occurred:

- (1) Unclear printing.
- (2) Unclear vertical column in printing paper.
- (3) Noisy feeding.

Cleaning steps are as follows:

- (1) Turn off the printer and open the roll paper cover. Remove the roll paper if any.
- (2) After printing, the thermal head can be very hot. Wait to let it cool before cleaning.
- (3) Clean the thermal elements of the thermal head with a wrung -out cotton moistened with an alcohol solvent.
- (4) Wait till the ethanol completely volatilized to close cover. Then print self-test page.

5

the FEED button. Now the printer enters the hexadecimal mode. Press FEED button twice, and it will print automatically with "Hexadecimal Dump" on the first line of the paper showing its hexadecimal mode. Press FEED button three times will go back to normal mode.

[4] Initialization

Make sure the printer is connected with the power. Press the FEED button and simultaneously turn on the power. After ERROR and PAPER LED double-blinking at the same time, wait for ERROR LED on until ERROR and PAPER LED double-flash again. Release the FEED button when buzzer alarming. At this time the printer has been initialized, restoring factory settings.

[5] How to solve paper jam

(1) Method 1

Re-start printer.


(2) Method 2

Open the battery cover near paper exit. Turn the white gear on the cutter. Only the cutter back to initial position, can the cover be opened.

Caution: Do not damage the printhead and auto cutter by open the cover forcibly.

4. Connecting the cables

- A. Connect the adopter cable to the printer power interface.
- B. Connect the data cable to the printer port.
- C. Connect the cash draw to the printer.

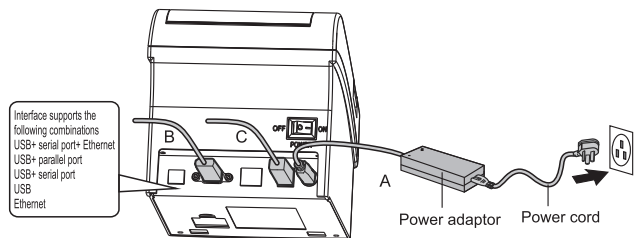


4

Notice:

- (1) Please make sure power off when maintaining printer.
- (2) Don't touch or scratch printing head surface, roller and sensors.
- (3) Avoid gas, acetone or other organic solvent.
- (4) Wait till alcohol completely volatilized, close top cover and connect power again.

Try print self test to make sure it works properly.

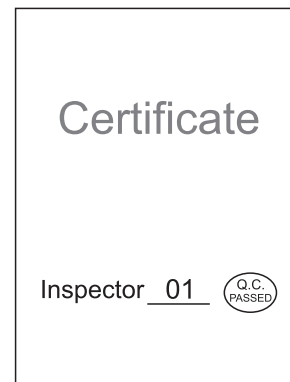

6